

DERYA

INTERNATIONAL ARMS COMPANY



DERYA DUAL SYSTEM

TR

DERYA DUAL SYSTEM YARI OTOMATİK ve POMPALI AV TÜFEĞİ KULLANMA KILAVUZU


(şekil 1)

FİŞEK DOLDURMA

Mekanizmayı geri çekerek tekrar bırakın. Fişek kaşığı serbest hale gelince sağ el baş parmağınızla fişekleri şarjör içerisinde tamamen kayboluncaya kadar itiniz.
Fişek haznesi doluncaya kadar Bu işlemi Tekrarlayınız (şekil 1)


(şekil 2)

FİŞEK KAŞIĞA DÜŞÜRME

Fişekleri kaşığa yerleştirdikten sonra kaşık altında bulunan fişek düşürücüye (44) basarak fişeğin kaşık üstüne düşmesini sağlayınız. (şekil 2)


(şekil 3)

FİŞEĞİN NAMLUYA SÜRÜLMESİ

Kaşık üzerine düşen fişeği ,fişek yatağına sürmek için kurma kolu yardımı ile mekanizmayı geri çekip bırakın.
Tüfeğinizi atış yapmaya hazır hale getiriniz. (şekil 3)


(şekil 4)

OTOMATİK VE POMPALI EL KUNDAK DEMONTAJI

Fişek düşürücüye basarak mekanizmayı kurma kolu yardımı ile çekerek kilitleyiniz. El kundağı sökmek için kundak üzerindeki kapak somununu saatin ters istikamete doğru çevirerek çıkartınız.
(şekil 4)

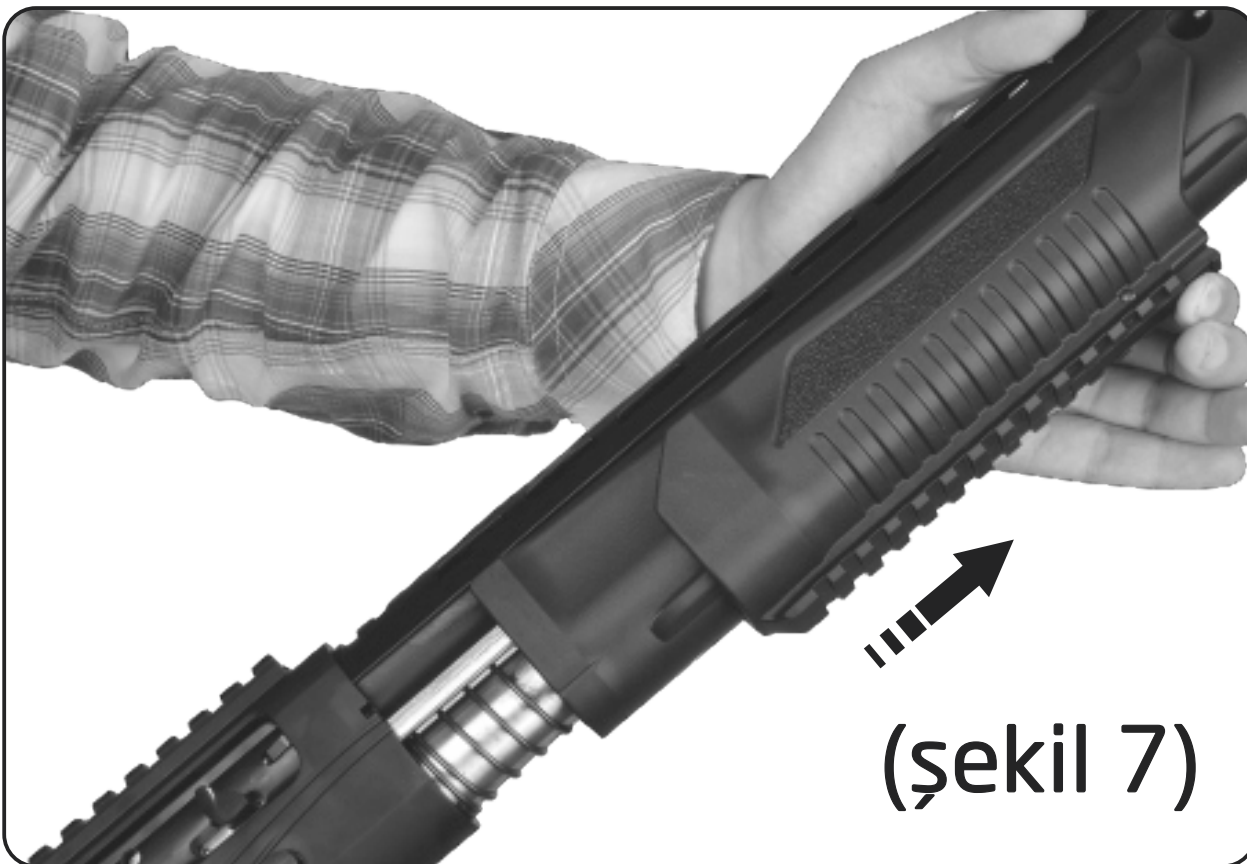

(şekil 5)

OTOMATİK POMPALI DEĞİŞTİRME VANASININ DEMONTAJI

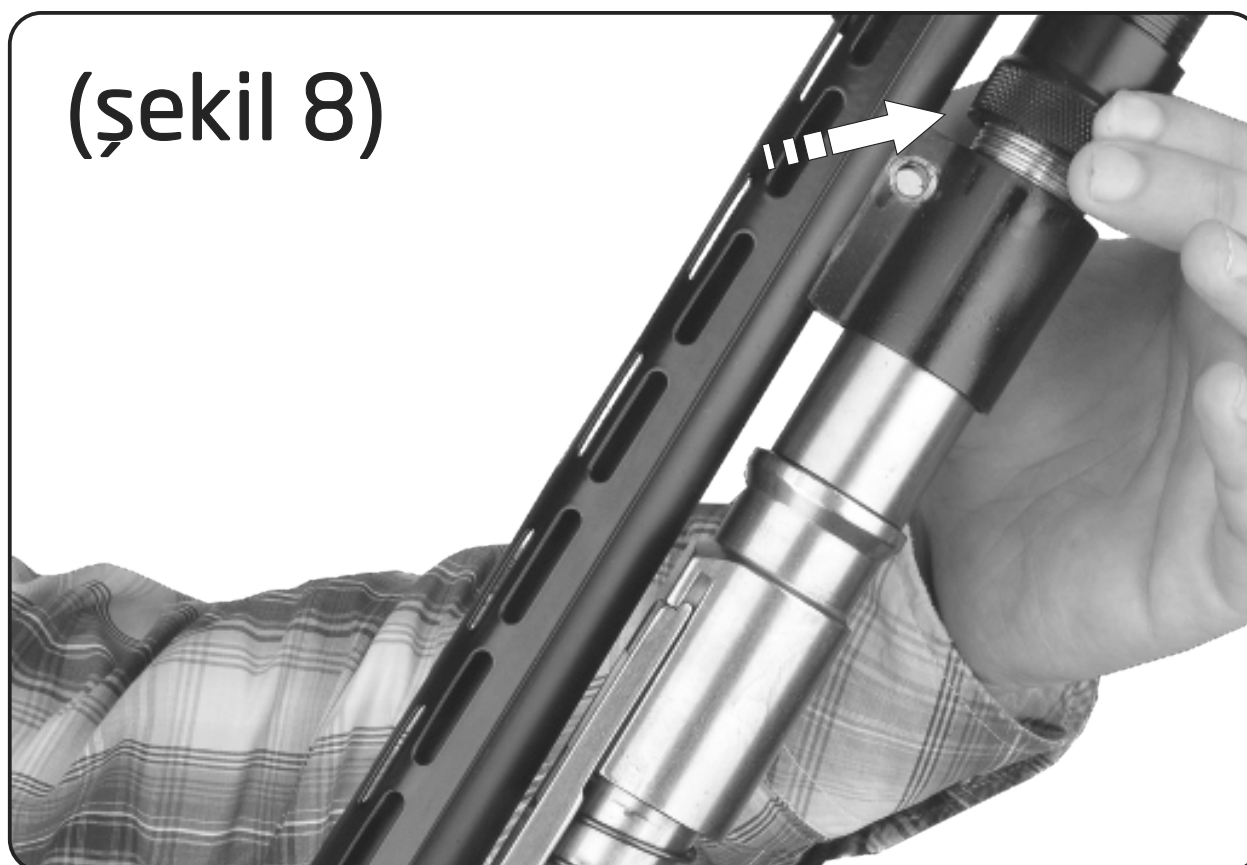
Otomatik pompalı değiştirme vanasının vidasını tornavida yardımı ile gösterilen şekilde saatin ters istikametinde döndürerek çıkarınız. (şekil 5).


(şekil 6)

Otomatik pompalı değiştirme vanasını elinizle doğru pozisyonda alınız. (şekil 6)

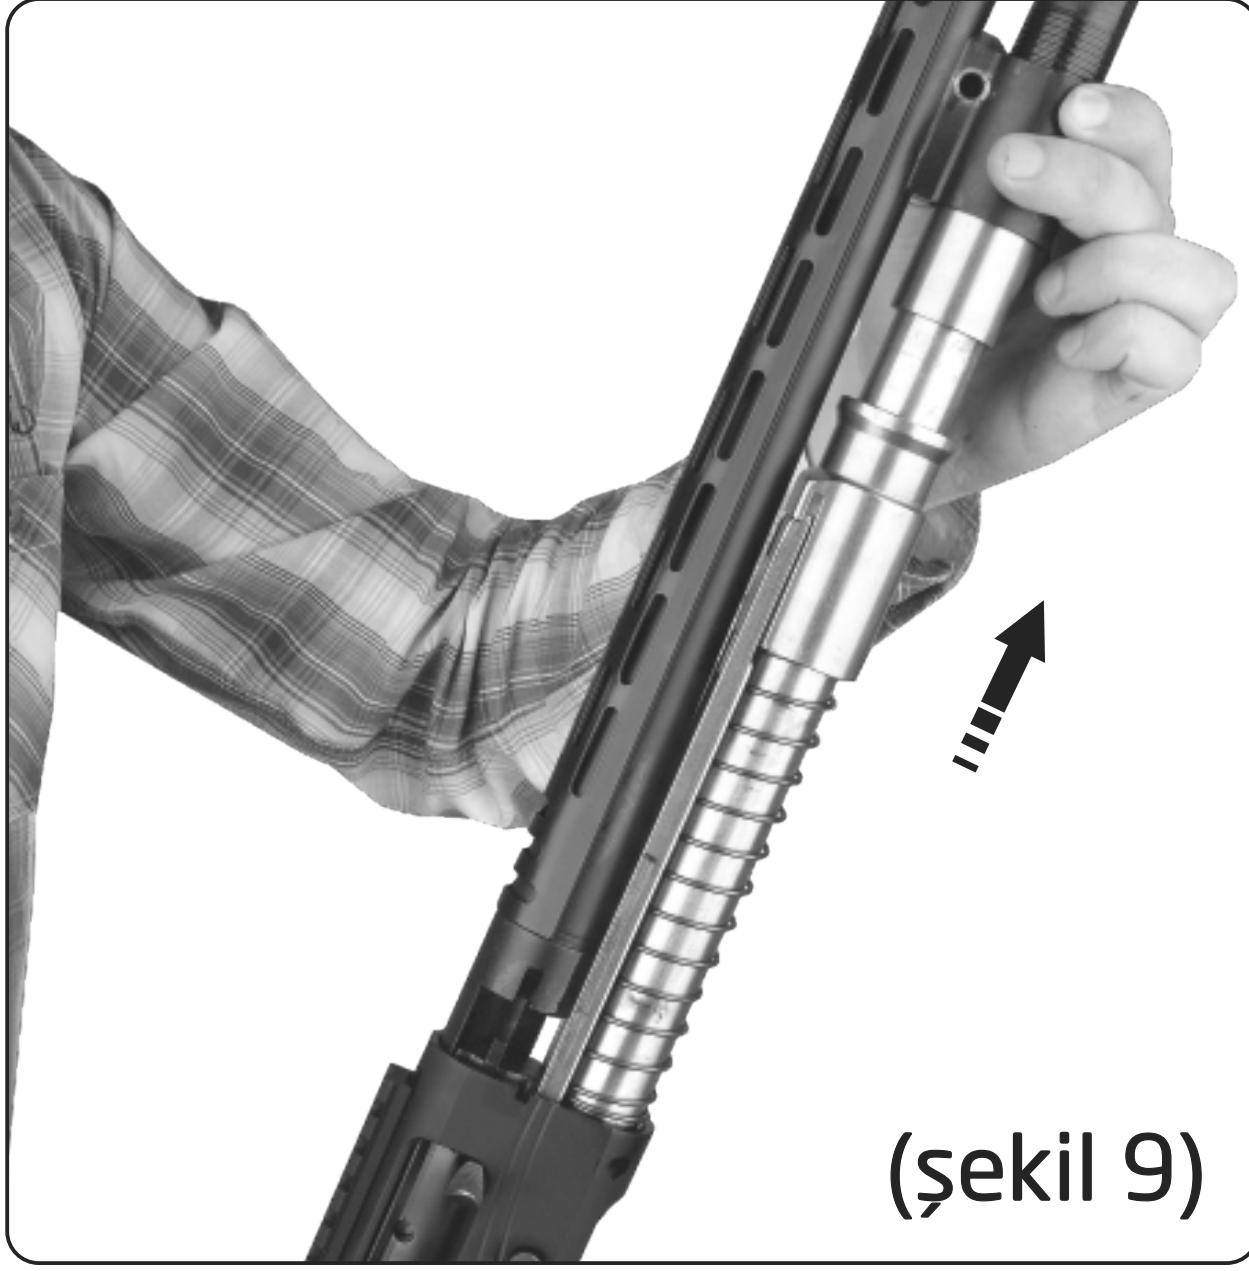

(şekil 7)

Otomatik pompalı el kunduğını, otomatik pompalı değiştirme pimine(75) basılı tutarak, namluya parelel şekilde yukarı çekerek çıkarınız. (şekil 7)


(şekil 8)

NAMLUNUN DEMONTAJI

Gaz odası üzerindeki kontra somunu (33) saat ters istikametinde çevirerek çıkartınız. (şekill 8)


(şekil 9)

Gaz halkasından (10) tutarak namluyu yukarı istikamette çekerek çıkartınız. (şekil 9)



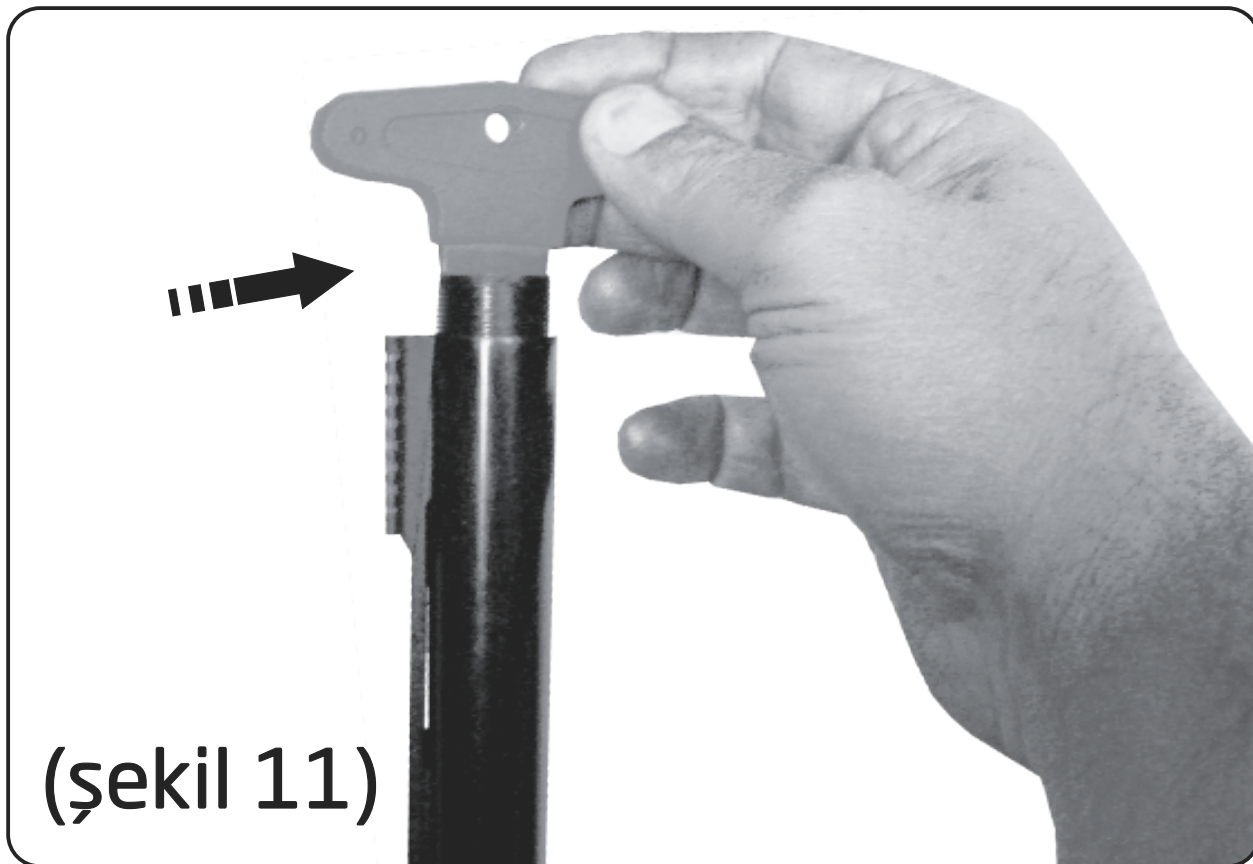
(şekil 10)

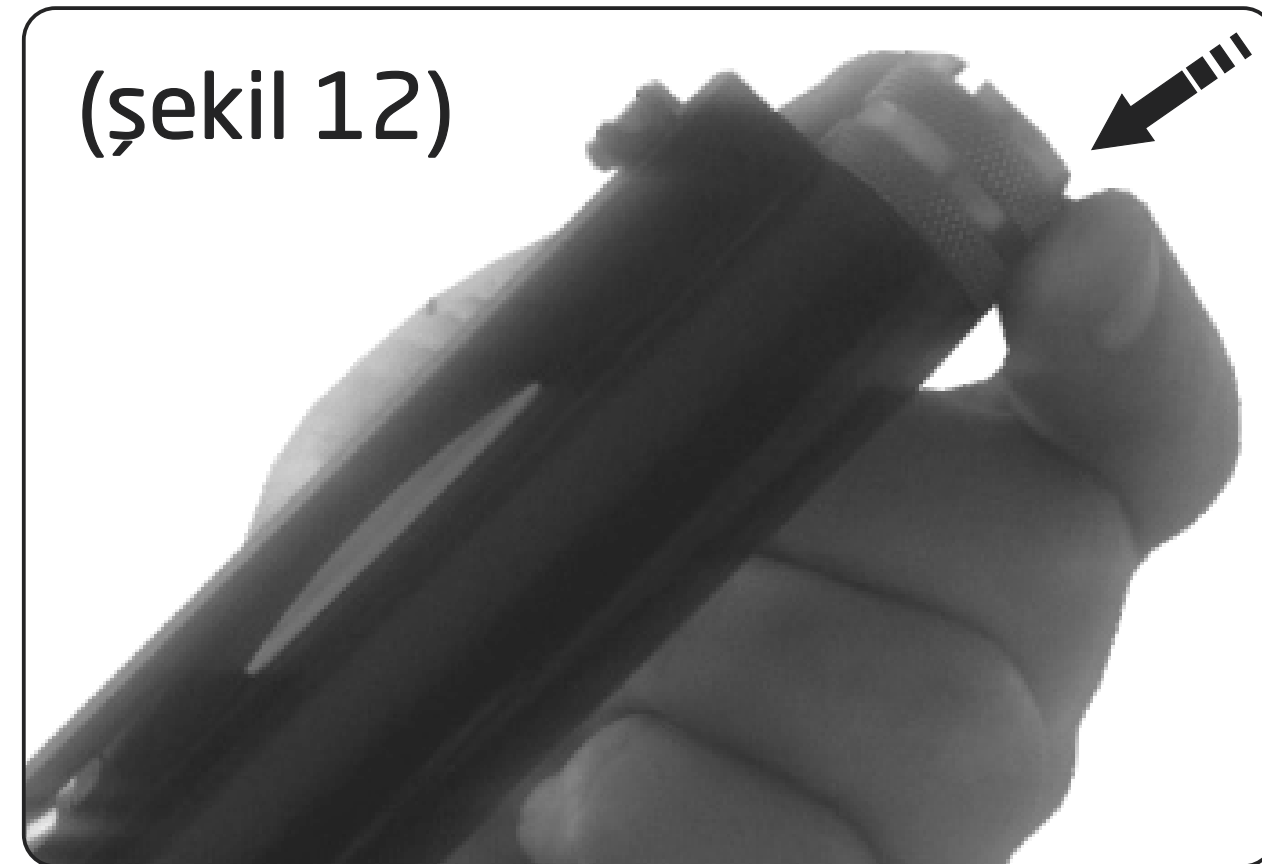
MEKANİZMA VE ALT KAPAĞIN DEMONTAJI

Kurma Kolunu çıkartınız (şekil 10). Mekanizmayı ileri doğru çekerek çıkartınız. Kasa pimini çıkartın ve alt kapağı aşağı doğru çekerek çıkartınız.

ŞOKUN ÇIKARTILMASI

Şok anahtarını şok üzerinde bulunan yatağa yerleştirerek saatin ters istikametinde çevirerek açınız.(Şekil 11) Şok Anahtarsız dıştan mobil şok sökümü için elinizle saatin ter istikametinde çevirerek çıkartınız. (Şekil 12)


(şekil 11)

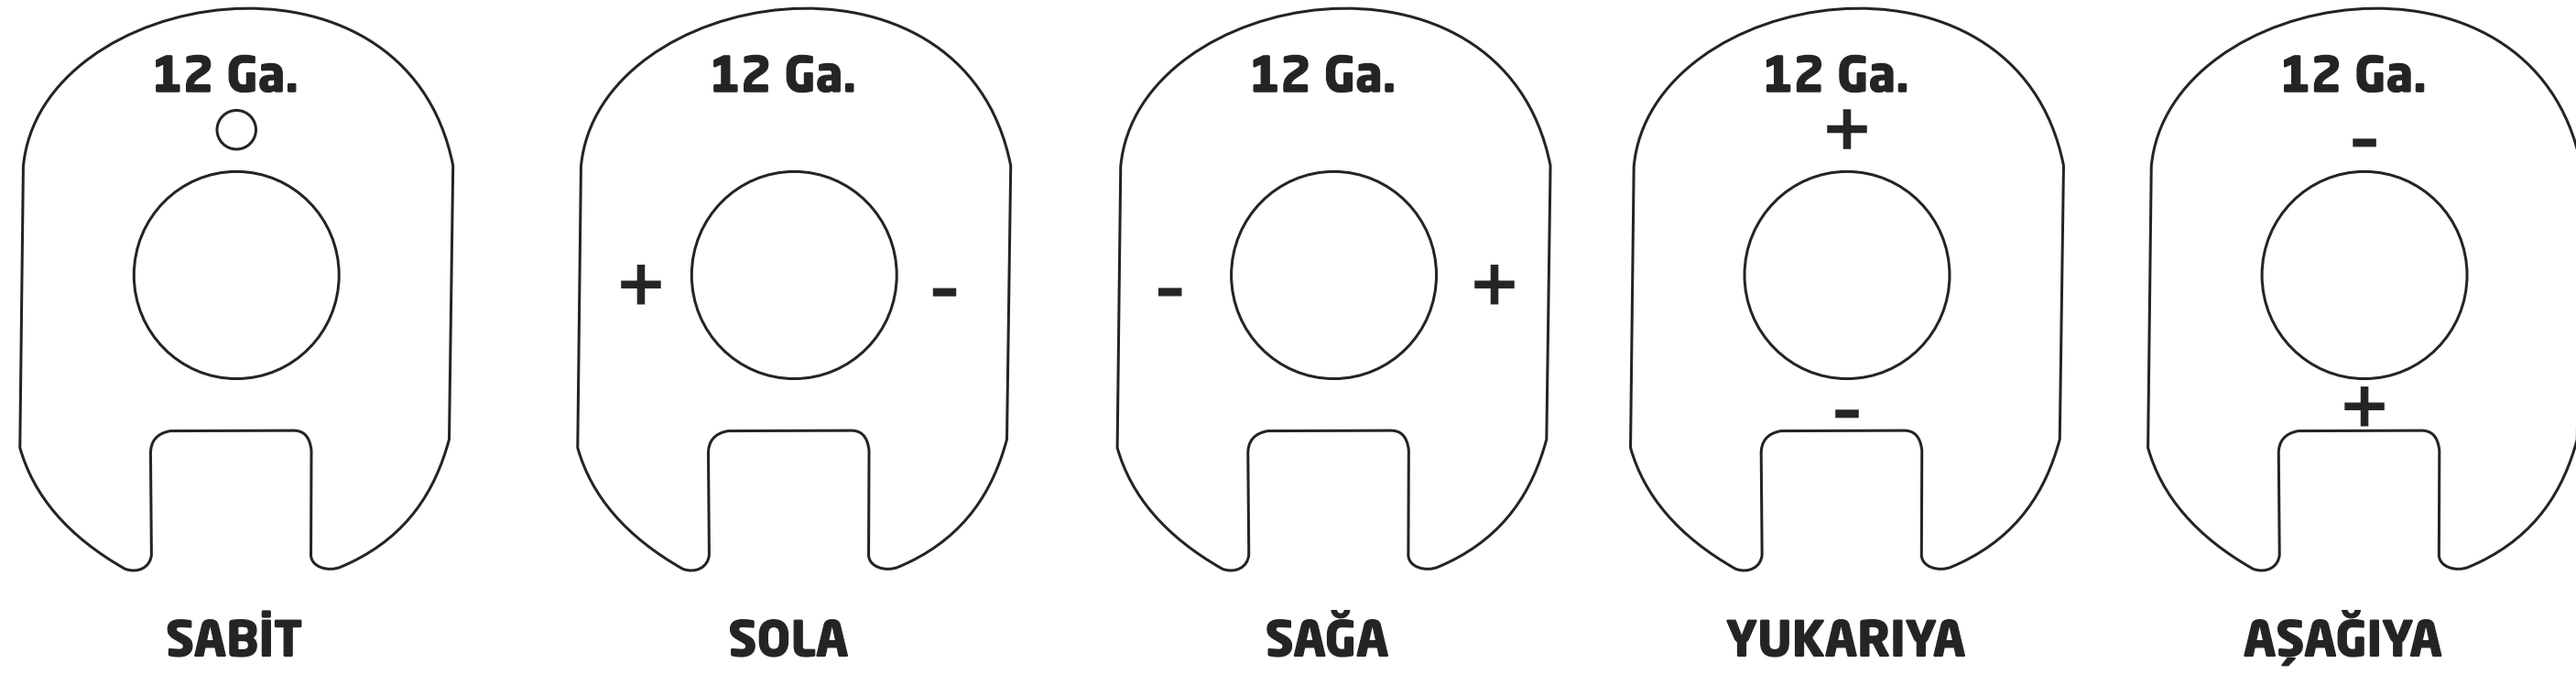

(şekil 12)

Not : Tüfek montajı için bu sürecin tersi devam edilir.

YARI OTOMATİK TÜFEĞİN ŞOK DEĞERLERİ ve KULLANIM ALANLARI

ŞOK DEĞERİ	KULLANIM ALANLARI	İŞARETİ
FULL *	Ördek ve kaz gibi su avlarında. Uzun menzilli avlarda.	
IMPROVED MODIFIED **	Keklik, tavşan ve uzun menzilli avlarda.	
MODIFIED ***	Çulluk, sülün, bıldırcın, keklik ve bunlar gibi avlarda.	
IMPROVED CYLINDER ****	Bıldırcın, sarı asma, üveyik ve kısa menzilli avlarda, tek kurşun kullanımında.	
SKEET *****	Skeet ve kısa mesafe atışlarında.	

UYARI: 1,2 ve 3 no'lu şoklarda tek kurşun atmayınız.
Ayrıca 1 ve 2 no'lu şoklarla çelik saçma atmayınız.



Derya Av Tüfeklerimizde kullanıcının tercihine uygun olarak Dipçiği ; sola, sağa, yukarıya, aşağıya, ve sabit olmak üzere ayarlayan 5 adet Nişangah ayar contası mevcuttur.

TR

UYARILAR VE ÖNERİLER

*Tüfeğinizi kullanmadan önce namlu içinin temiz olmasına dikkat ediniz.
*Tüfeği kullanmadan önce mobil şok veya alev gizleyenin saat yönünde tam OTURDUĞUNU kontrol ediniz.
*Bir numaralı full şokla kesinlikle tek kurşun atmayınız. Tek kurşunu 5 numara şok ile kullanınız.
*Tabloda verilen değerler kullandığınız fişeğe göre değişebilir. Avınıza ve fişeğinize en uygun şoku seçmeye önem gösteriniz.
*Her kullanımdan sonra gaz halkası (10) ve OTOMATİK POMPALI pistonu(36) temizleyiniz.
*Tüfeğinizle atış yaparken el kundak üzerindeki kapak somununun (34) sıkı olmasına dikkat ediniz aksi halde tüfeğiniz gaz kaçıracağından çalışma randumanı düşecektir.
*Tüfeğinizin verimli çalışabilmesi için uygun silah yağları ile yağlanması gereklidir.
*Tüfeğinize en uygun fişekleri kullanınız ,uygunsuz fişek kullanımından kaynaklanan arızalardan firmamız sorumlu değildir.

DERYA DUAL SYSTEM (DERYA YARI OTOMATİK VE POMPALI MODEL AV TÜFEĞİ) TEKNİK KULLANIMI

Derya silah sanayi tarafından üretilen Derya Dual System tüfeğimiz gazlı yarı otomatik ve pompalı çalışabilen yeni bir modelimizdir.ve çalışma sistemi TR2013/1169Y. Faydalı model numarası İle Derya Silah Sanayi Patenti Altındadır.
Derya Dual System av tüfeği ,el kundağındaki ve gaz halkasına sabit otomatik ve pompalı değiştirme vanası ile pompalı veya otomatik çalışması sağlanır.
Gazlı yarı otomatik barut gazının basınç gücü ile geri tepmeyi sağlar.
Mekanizma barut gazının gücü ile geri gelerek icra yayını sıkıştırır,boş kovanı dışarı fırlatır. Basınç gücü kalmayınca yay mekanizmayı ileri doğru haraket ettirerek yeni fişeği, fişek haznesine yerleştirir. Pompalı modele geçmek için ise gaz halkasındaki otomatik pompalı değiştirme vanası yardımı ile otomatikten pompalıya alınır. Sisteme giden gaz delikleri kapanır ve pompalı el kundak devreye girer. Her fişek atımında ikinci pompalı el kundak yardımı ile doldur boşalt yapılır.

Derya Silah Sanayi Üretmiş Olduğu Tüfeklerin tamamı TSE Kurumunun TS 870 Standartlarına Uygundur.

GARANTİ ŞARTLARI

1 - Garanti süresi malın teslim tarihinden itibaren başlar. ve 2 yıldır.

3 - Malın garanti süresi içerisinde arızalanması halinde, tamirde geçen süre garanti süresine eklenir.
Malın tamir süresi en fazla 40 gündür. Bu süre malın servis istasyonuna, servis istasyonu olmaması durumunda sırayla; malın satıcısı, bayii, acentası, temsilciliği, ithalatçısı veya imalatçısından birisine teslim edildiği tarihten itibaren başlar.

4 - Malın garanti süresi içerisinde, gerek malzeme ve işçilik gerekse montaj hatalarından dolayı arızalanması halinde, işçilik masrafı, değiştirilen parça bedeli ya da başka herhangi bir ücret talep edilmeksizin tamiri yapılacaktır.

5 - Kargo ücreti kullanıcıya aittir.

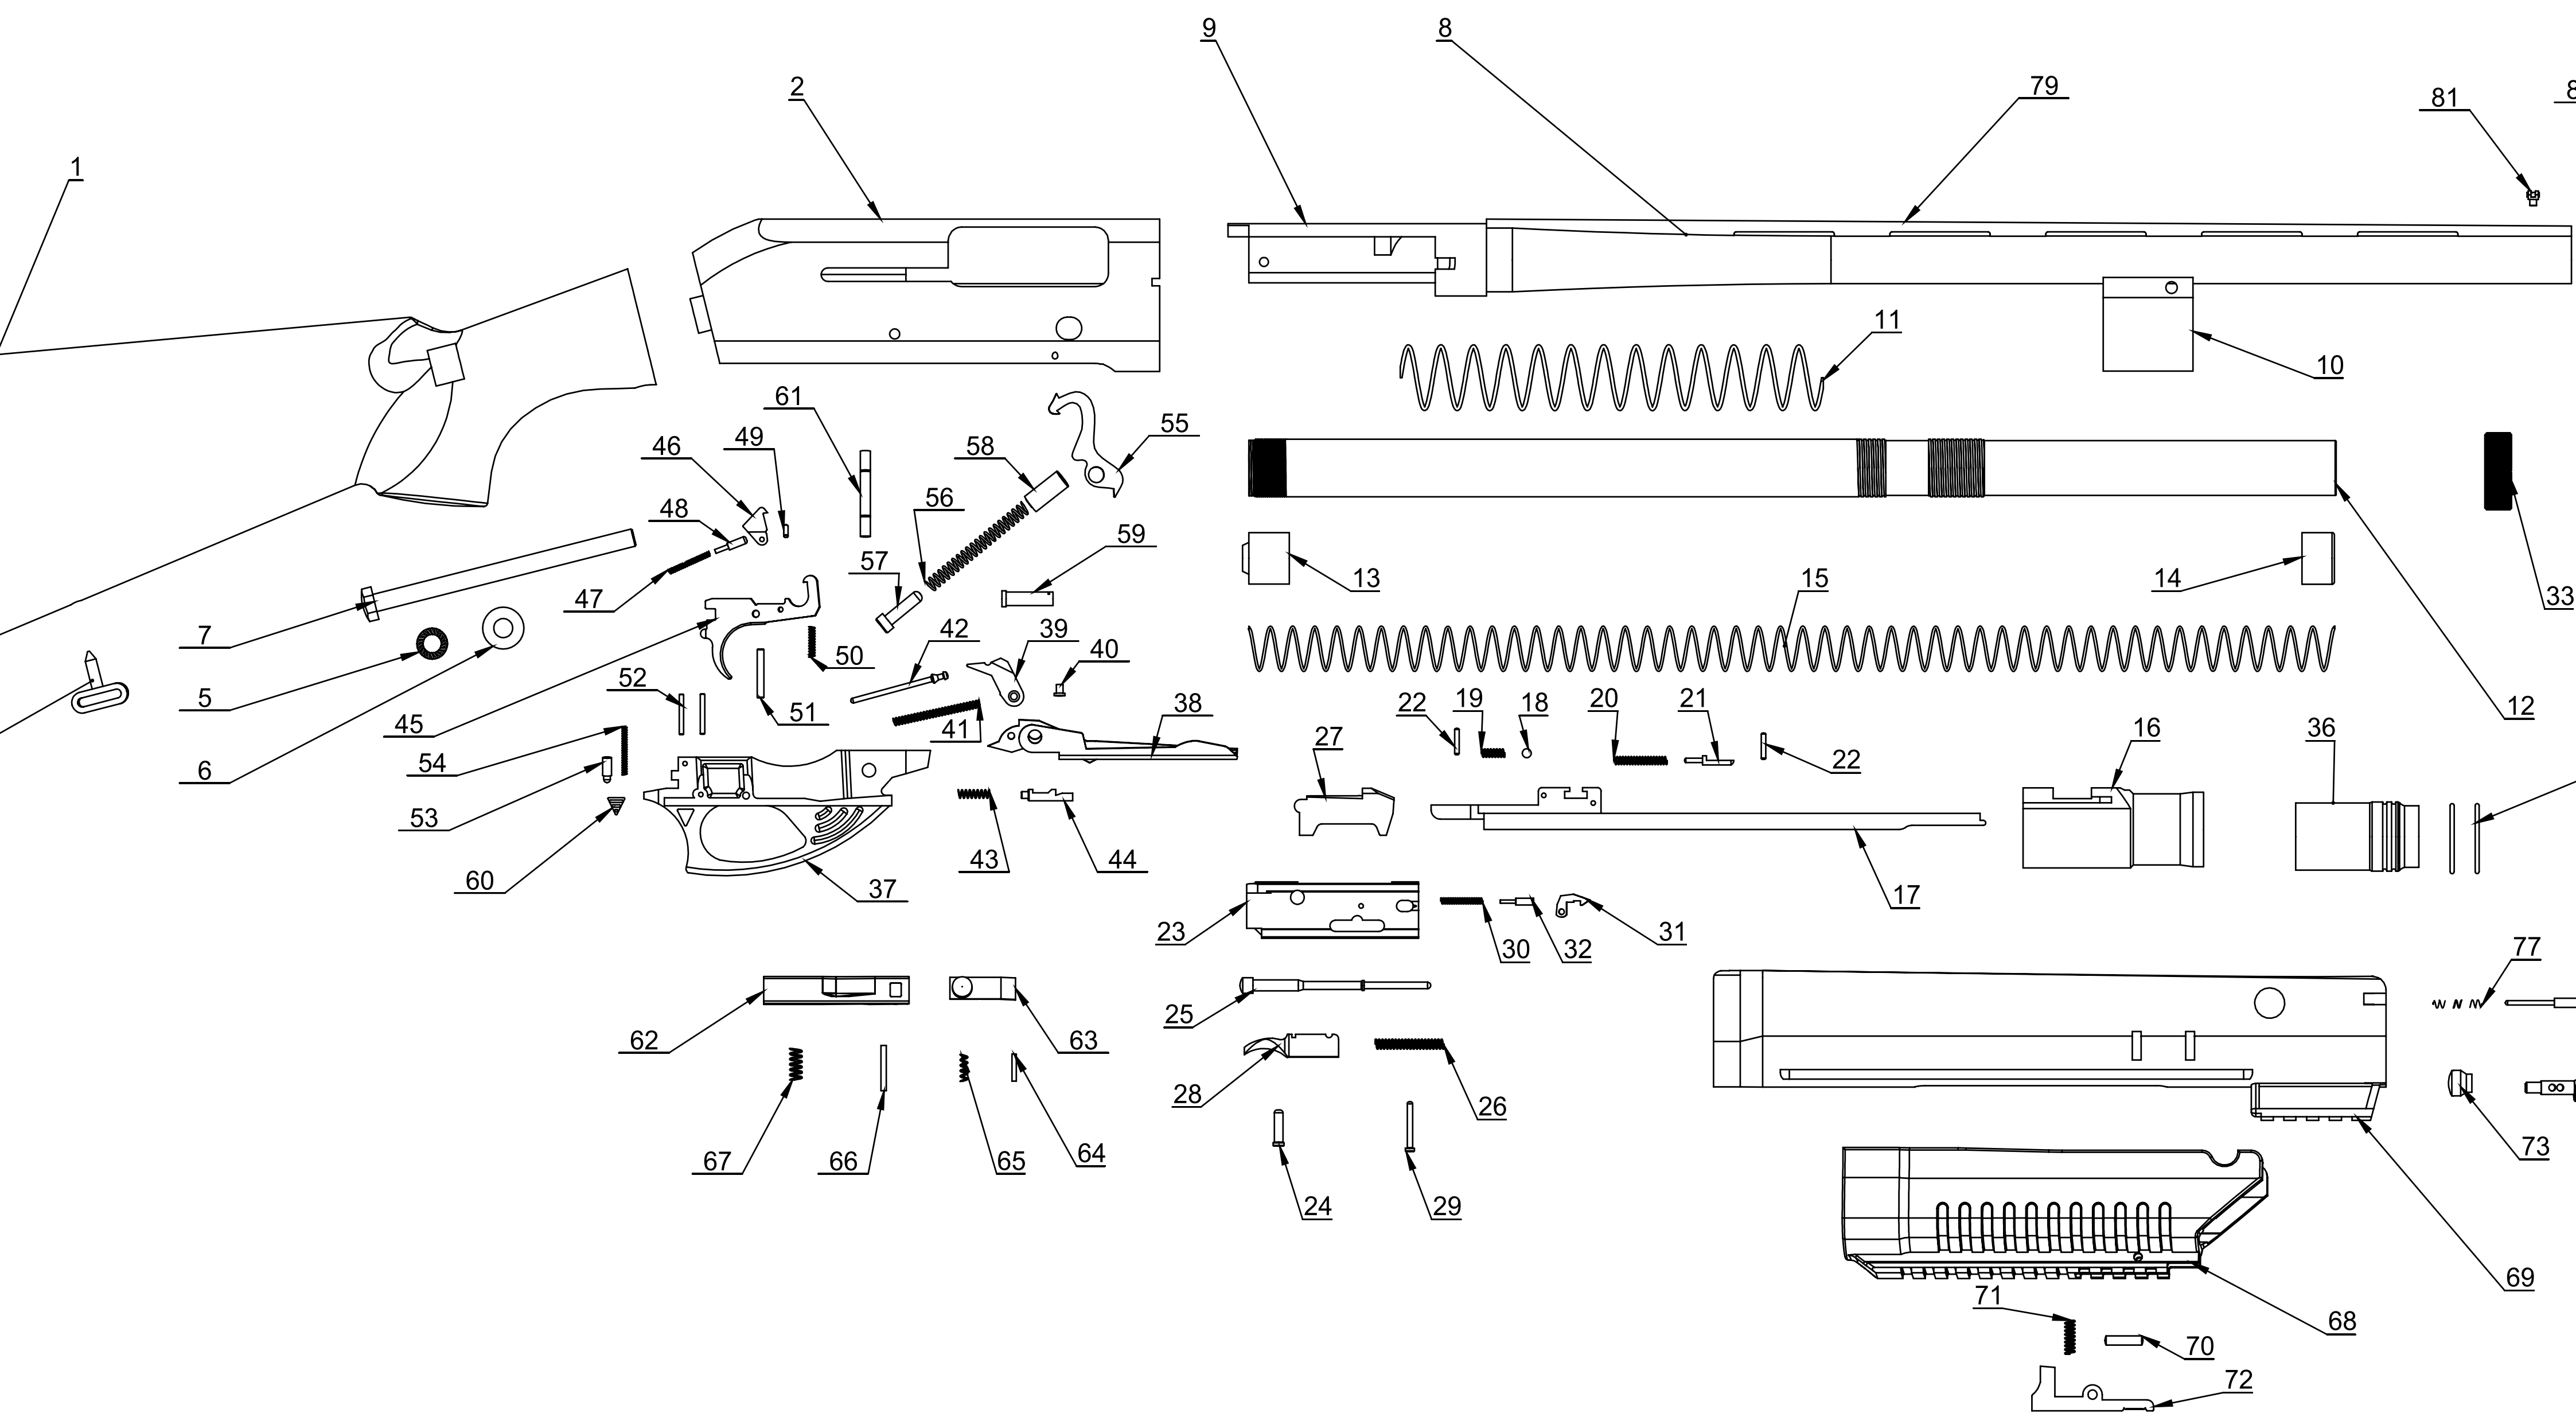
6 - Malın kullanma kılavuzunda yer alan hususlara aykırı kullanılmasından kaynaklanan arızalar garanti kapsamı dışındadır.

Not : Ağaç kısmı Garanti Kapsamında Değildir.

PARÇA LİSTESİ

1	DİPÇİK	42	ALT BAŞI PİMİ
2	KASA	43	DÜŞÜRÜCÜ YAYI
3	DİPÇİK LASTİĞİ	44	FİŞEK DÜŞÜRÜCÜ
4	KAYIŞLIK	45	TETİK
5	TIRTILLI PUL	46	KÖR TETİK
6	PUL (8.5*18.5*2.5)	47	KÖR TETİK YAYI
7	DİPÇİK SAPAMA (M8)	48	KÖR TETİK PİMİ
8	NAMLU	49	2*5.8 PİM
9	KEP	50	TETİK HAREKET YAYI
10	GAZ ODASI	51	3*21.6 TETİK PİMİ
11	İCRA YAYI	52	2*17.8 PİM
12	7+1 ŞARJÖR BORUSU	53	EMNİYET KOVANI
13	ARKA TAPA	54	EMNİYET YAYI
14	ÖN TAPA	55	HOROZ
15	ŞARJÖR YAYI	56	HOROZ YAYI
16	KOL BORUSU	57	HOROZ PİMİ
17	KOL	58	HOROZ KOVANI
18	4’LÜK BİLYE	59	6’LIK KOVAN
19	4’LÜK BİLYE YAYI	60	EMNİYET
20	ŞAK PİM YAYI	61	KASA PİMİ
21	ŞAK PİM	62	FİŞEK TUTUCU SACI
22	2/16.5 PİM	63	FİŞEK TUTUCU DÜĞME
23	MEKANİZMA	64	FİŞEK TUTUCU DÜĞME PİMİ
24	İĞNE PİMİ	65	FİŞEK TUTUCU DÜĞME YAYI
25	İĞNE	66	FİŞEK 2.5*20 YARIK PİM
26	İĞNE YAYI	67	FİŞEK TUTUCU YAYI
27	KİLİT	68	POMPALI EL KUNDAĞI
28	KURMA KOLU	69	EL KUNDAĞI SABİT
29	TIRNAK PİMİ	70	EL KUNDAĞI TIRNAK PİMİ
30	TIRNAK YAYI	71	EL KUNDAĞI TIRNAK YAYI
31	TIRNAK	72	EL KUNDAĞI TIRNAK
32	TIRNAK YAY PİMİ	73	OTOMATİK POMPALI DEĞİŞTİRME SOMUN
33	KONTRA SOMUN	74	OTOMATİK POMPALI DEĞİŞTİRME VİDA
34	KAPAK SOMUN	75	OTOMATİK POMPALI DEĞİŞTİRME VİDA PİMİ
35	PİSTON SEKMANI	76	OTOMATİK POMPALI DEĞİŞTİRME PARÇASI
36	OTOMATİK POMPALI PİSTON	77	OTOMATİK POMPALI DEĞİŞTİRME VİDA PİMİ YAYI
37	ALT KAPAK	78	M3*4 SET SUKUR VİDA
38	KAŞIK	79	ŞERİT
39	ALT BAŞI	80	MOBİL ŞOK
40	ALT BAŞI PERÇİNİ	81	Fiber Optik Gez
41	ALT BAŞI YAYI		

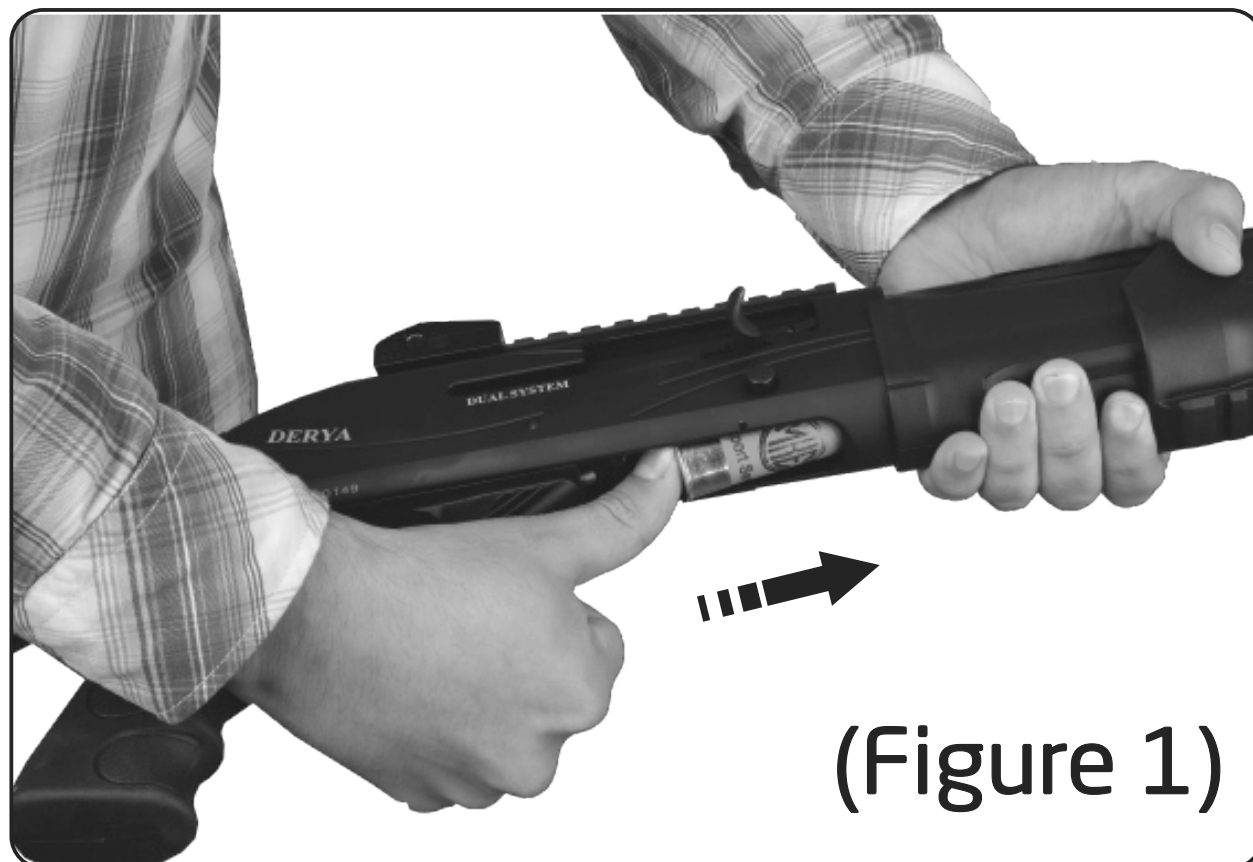
DERYA DS DUAL SYSTEM



PART LIST

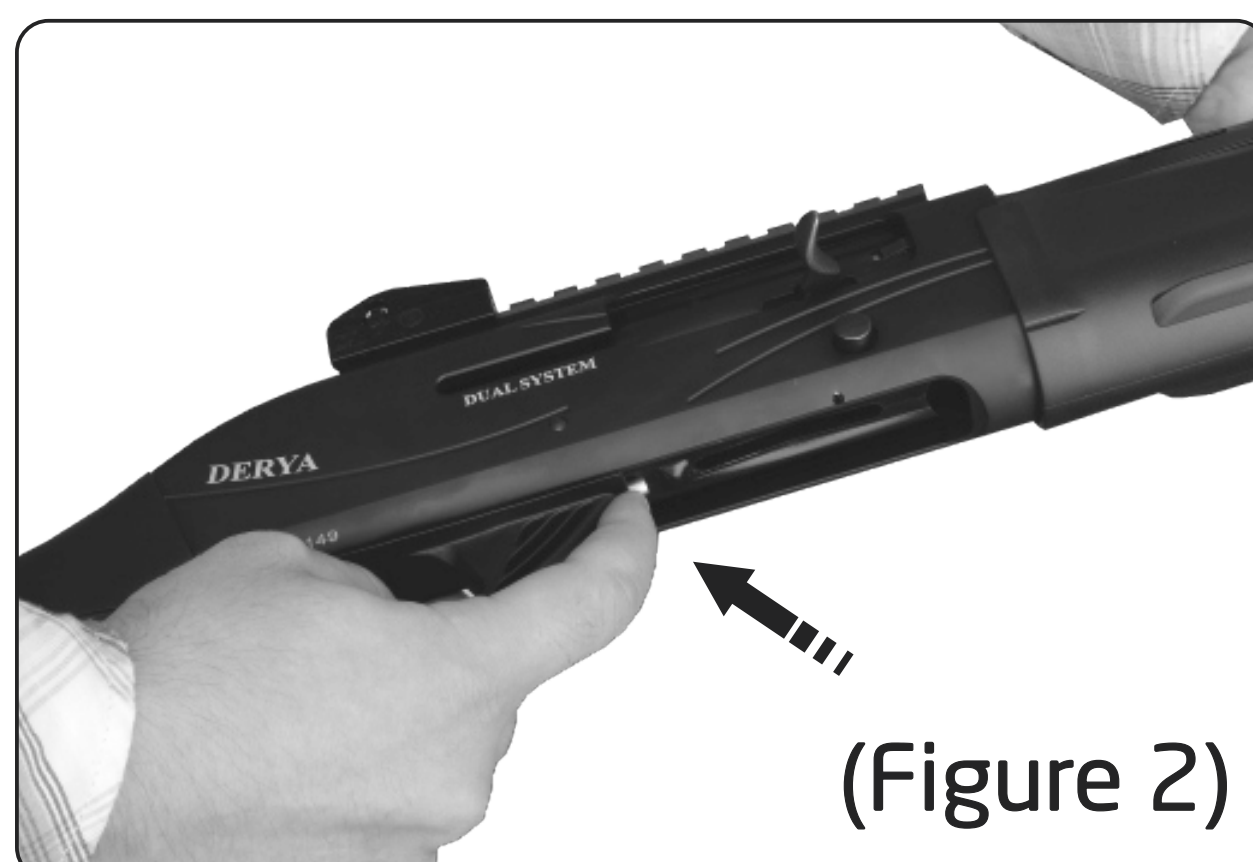
1	Stock	42	Carrier Latch Pin
2	Reciever	43	Release cartridge Latch Spring
3	Recoil-Ped	44	Release Latch
4	Sling Swivel	45	Trigger
5	Rove	46	Sear
6	Rove(8.5*18.5*2.5)	47	Sear Spring
7	Stock Main Screw	48	Sear Pin
8	Barrel	49	Pin
9	Cap	50	Trigger Action Spring
10	Gas Chamber	51	Trigger Pin
11	Main Spring	52	Pin
12	Magazine Tube	53	Safety Buton part
13	Back Plug	54	Safety Buton spring
14	Front Plug	55	Hammer
15	Magazine Spring	56	Hammer Spring
16	Arm Pipe	57	Hammer Pin
17	Action-Bar	58	Hammer Part
18	Action Bar part	59	Filling part
19	Spring	60	Safety button
20	Pin Spring	61	Reciever pin
21	Pin	62	Bolt
22	Pin	63	Bolt buton
23	Bolt-Action	64	Bolt buton pin
24	Firing Pin aparatus	65	Bolt buton spring
25	Firing Pin	66	Bolt Niche
26	Firing pis Spring	67	Bolt spring part
27	Lock	68	Fore-End for pump-action
28	Bolt Handle	69	Fixed Fore-End
29	Latch Pin	70	Fore-End Latch Pin
30	Latch Spring	71	Fore-End Latch Spring
31	Latch	72	Fore-End Latch
32	Latch Spring Pin	73	Dual action system changing Buton
33	Magazine Cap	74	Dual Action system changing screw
34	Magazine Cap Part	75	Dual action system changing screw pin
35	Piston Ring	76	Dual action system changing part
36	Dual Action's Piston	77	Dual aciton system changing screw pin spring
37	Trigger Group	78	Screw
38	Carrier	79	Rip
39	Carrier Latch	80	Mobile Choke
40	Carrier Latch Part	81	Fiber Optic Front Sight
41	Carrier Latch Spring		

DERYA DUAL SYSTEM BOTH SEMI-AUTOMATIC AND PUMP-ACTION SHOTGUN MANUAL USER GUIDE ENG


(Figure 1)

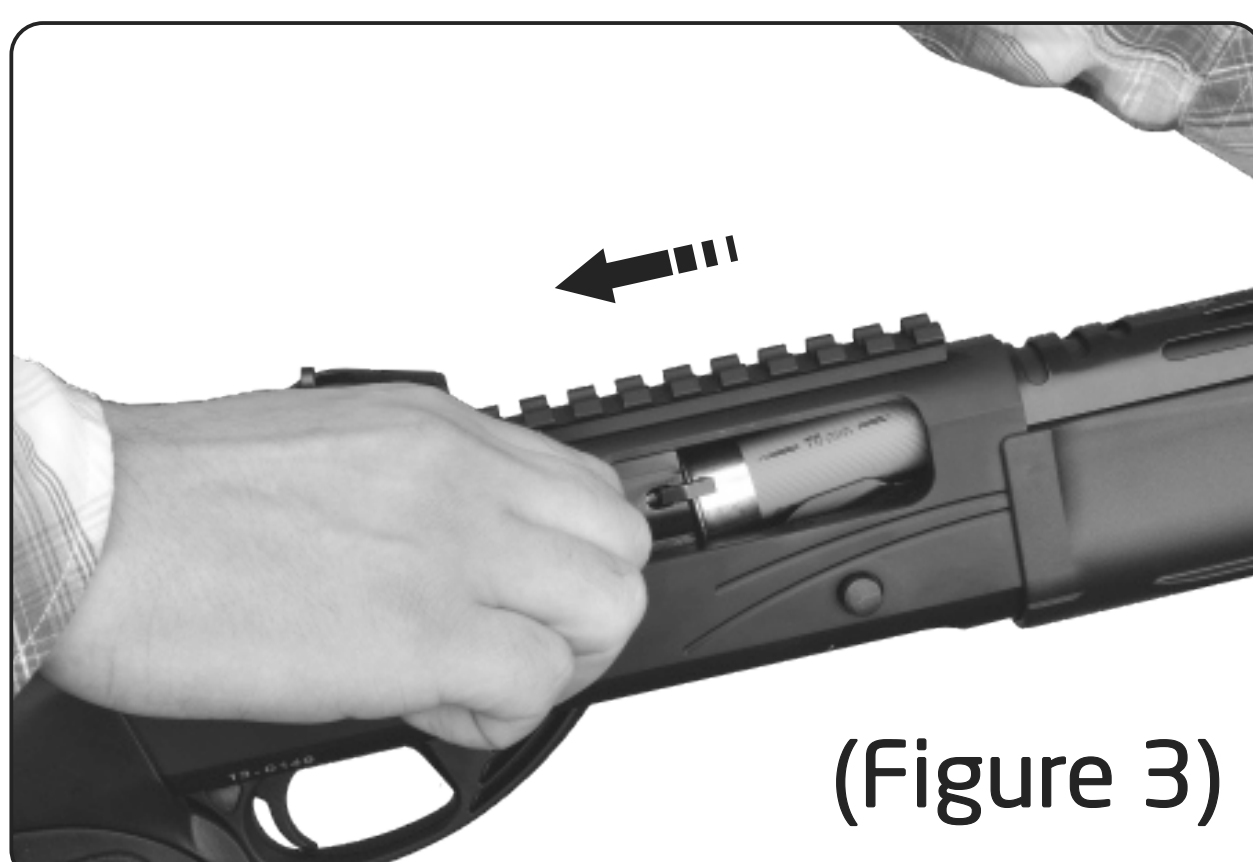
LOAD CARTRIDGE

Firstly , You must set the bolt handle up and leave for ready to load . Start to load to Cartridges in magazine tubes with your thumb of right hand . Continue to this action till to filled magazine tube . (figure 1)


(Figure 2)

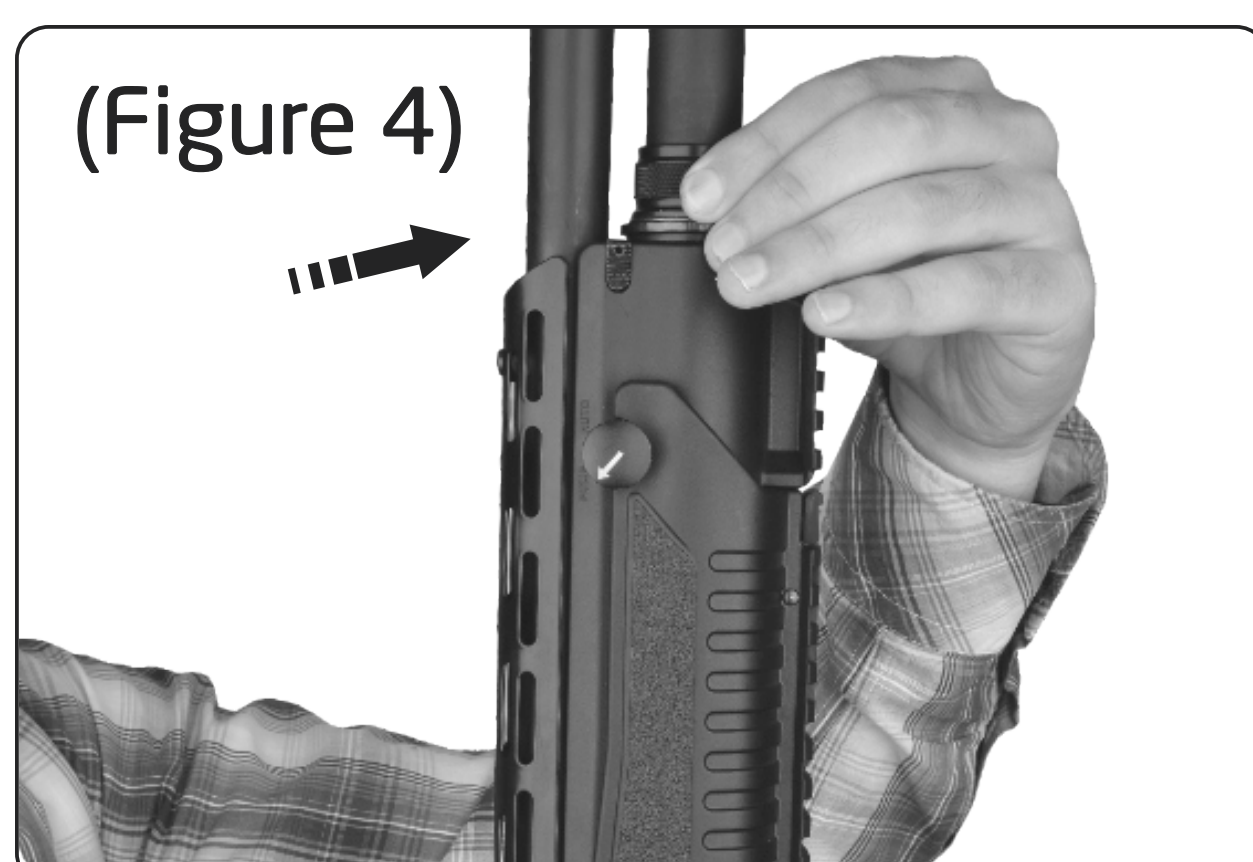
LOADING COMPLETETION

After loading all cartridges , press to Carrier Latch for complete to place first cartridge on Carrier .
(figure2)


(Figure 3)

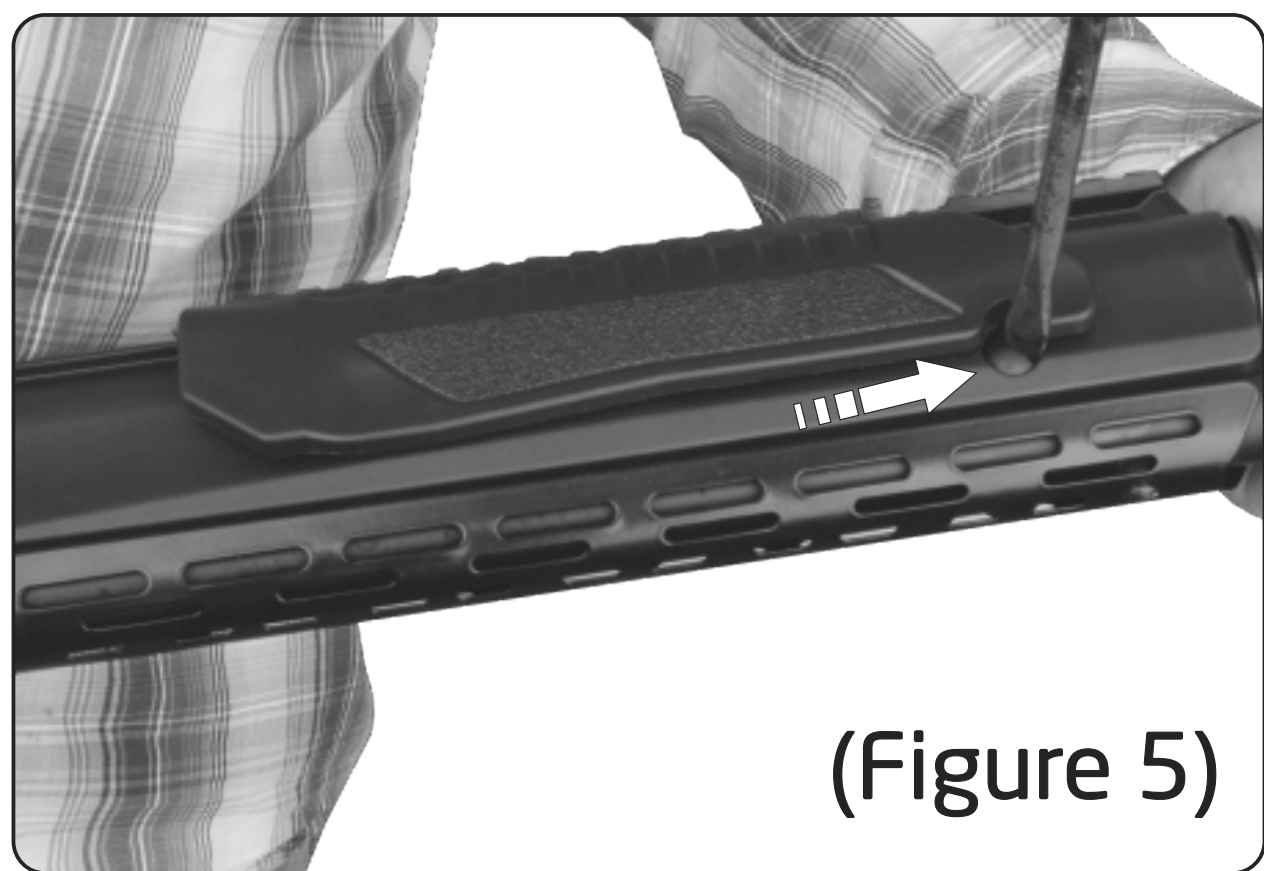
PLACEMENT TO THE CARTRIDGE IN CHAMBER

Pull back to bolt handle back and leave to place the cartridge in to Chamber and get the shotgun ready to fire .
(figure: 3)


(Figure 4)

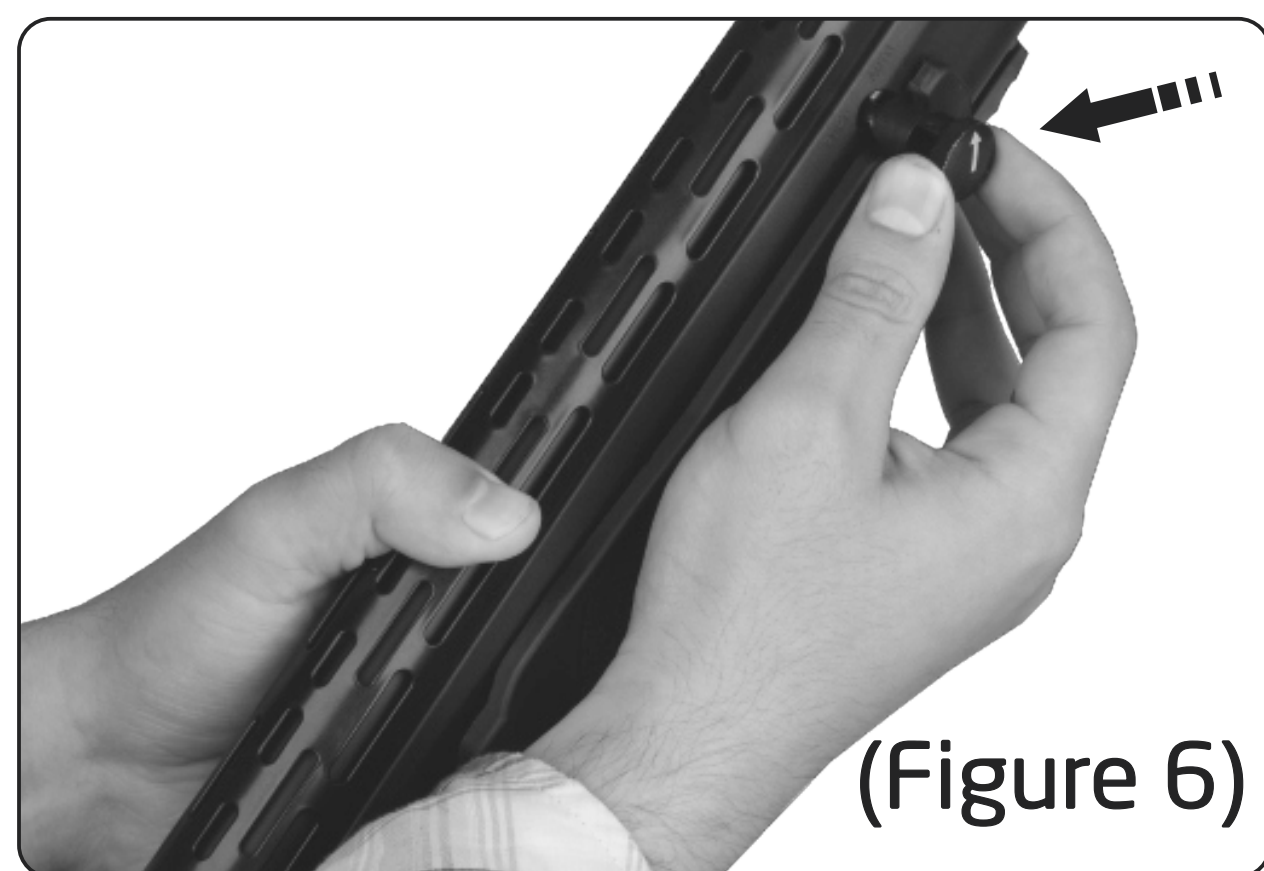
DISTMANTLING OF DUAL ACTION SHOTGUN :

Press to Carrier Latch to lock Shotgun with bolt handle .
Turn to Magazine Cap to anti-clockwise side to remove fore-end .
(figure : 4)

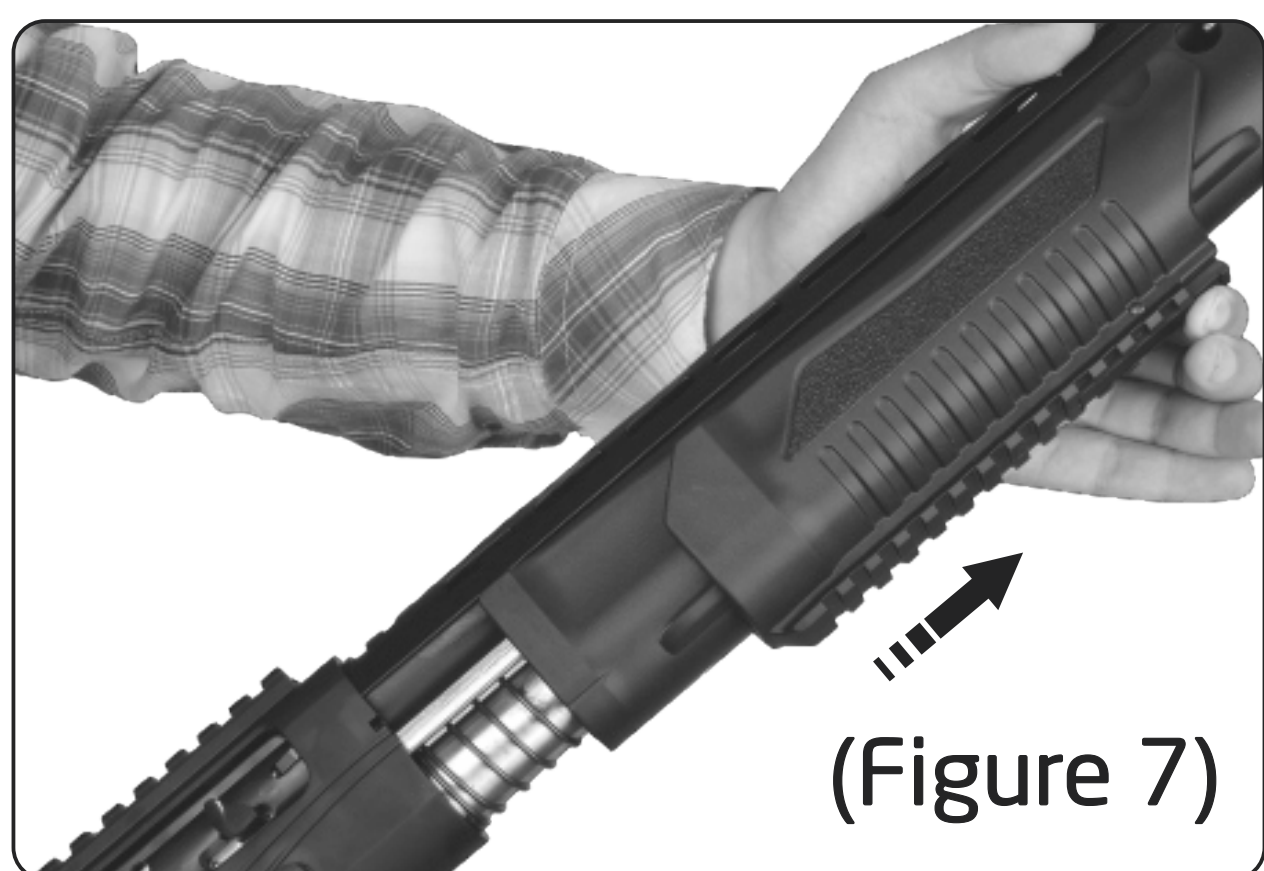

(Figure 5)

DUAL ACTION SHOTGUN SYSTEM CHANGING BUTTON REMOVE

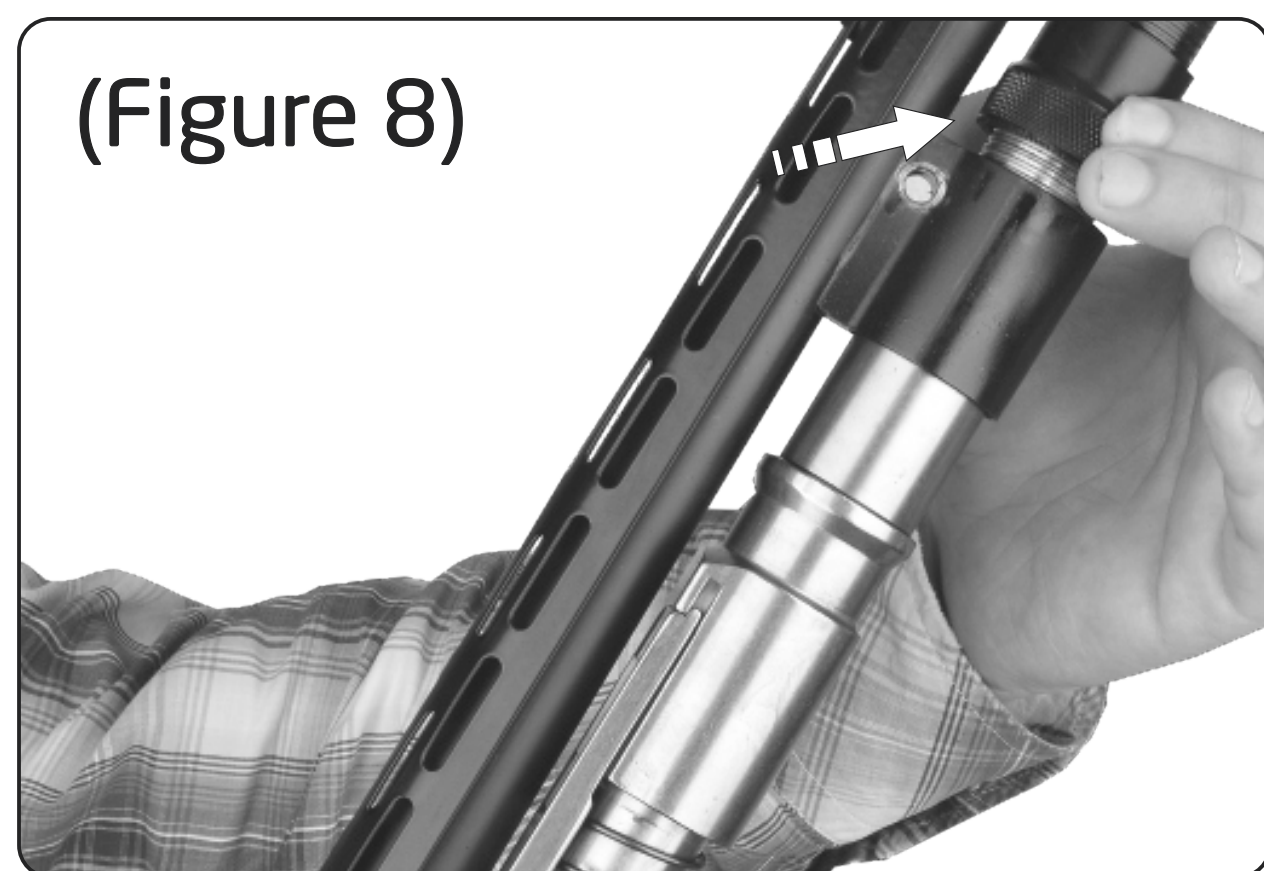
Screw to Changing System Button to anti-clockwise side with a screwdriver. (Figure 5)


(Figure 6)

Put to System Changing Button to a STREIGHT position for easy remove. (Figure 6)

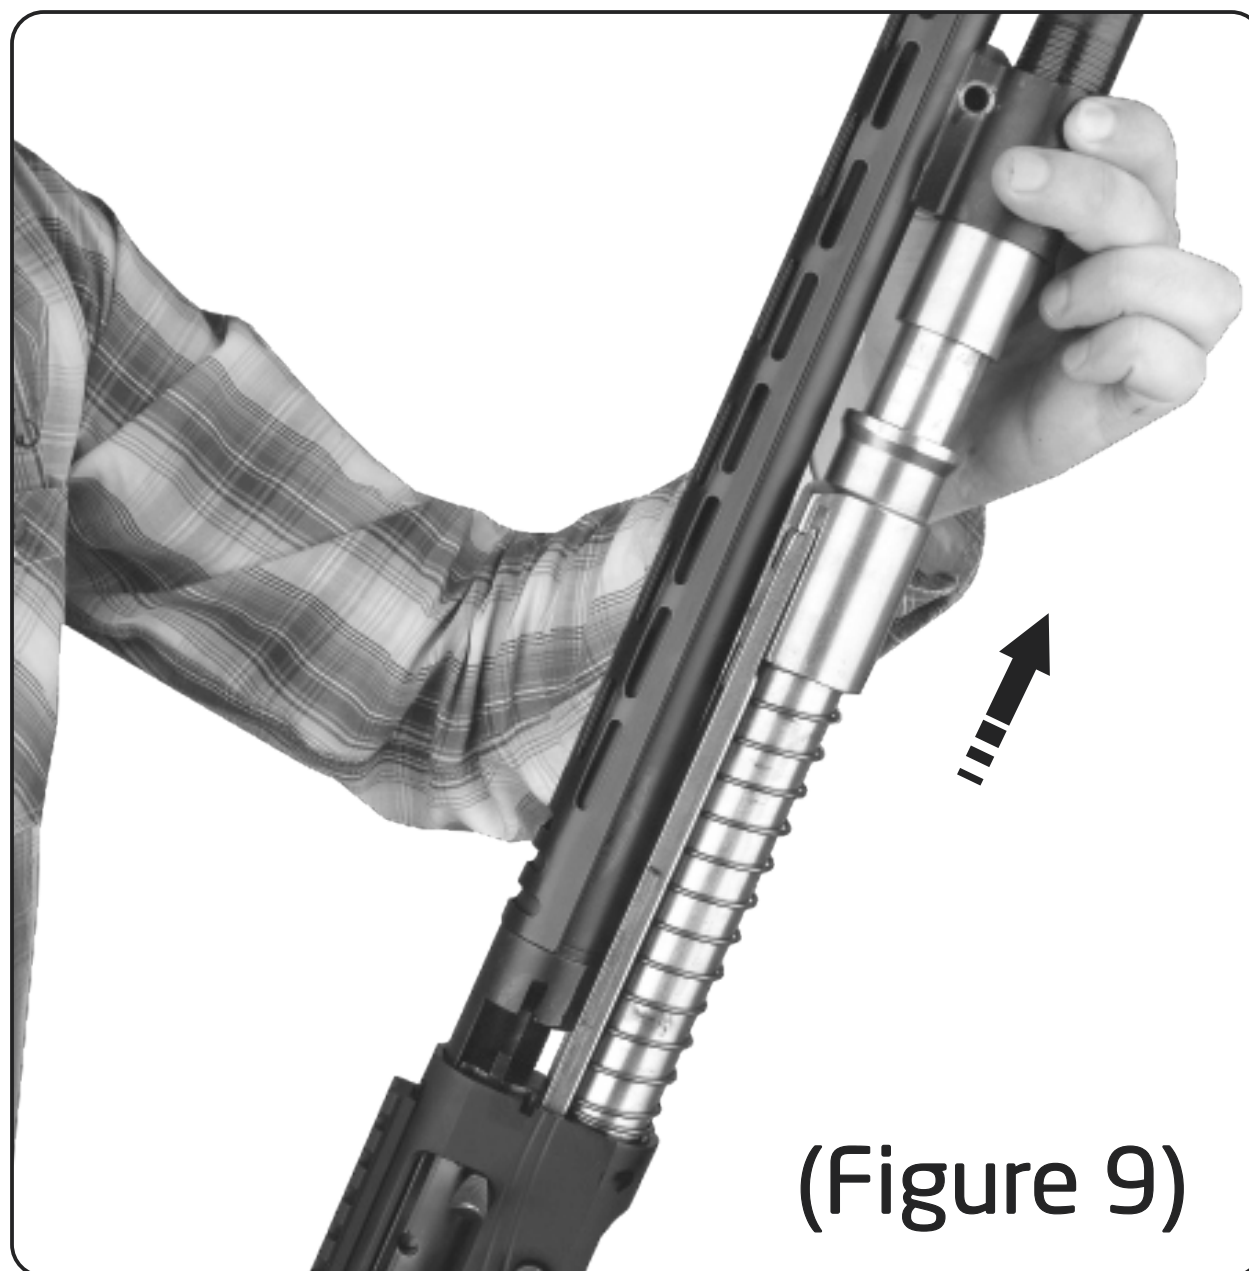

(Figure 7)

While you are pressing to System Changing Latch , remove to fore-end with sliding on to Barrel .
(Figure 7)

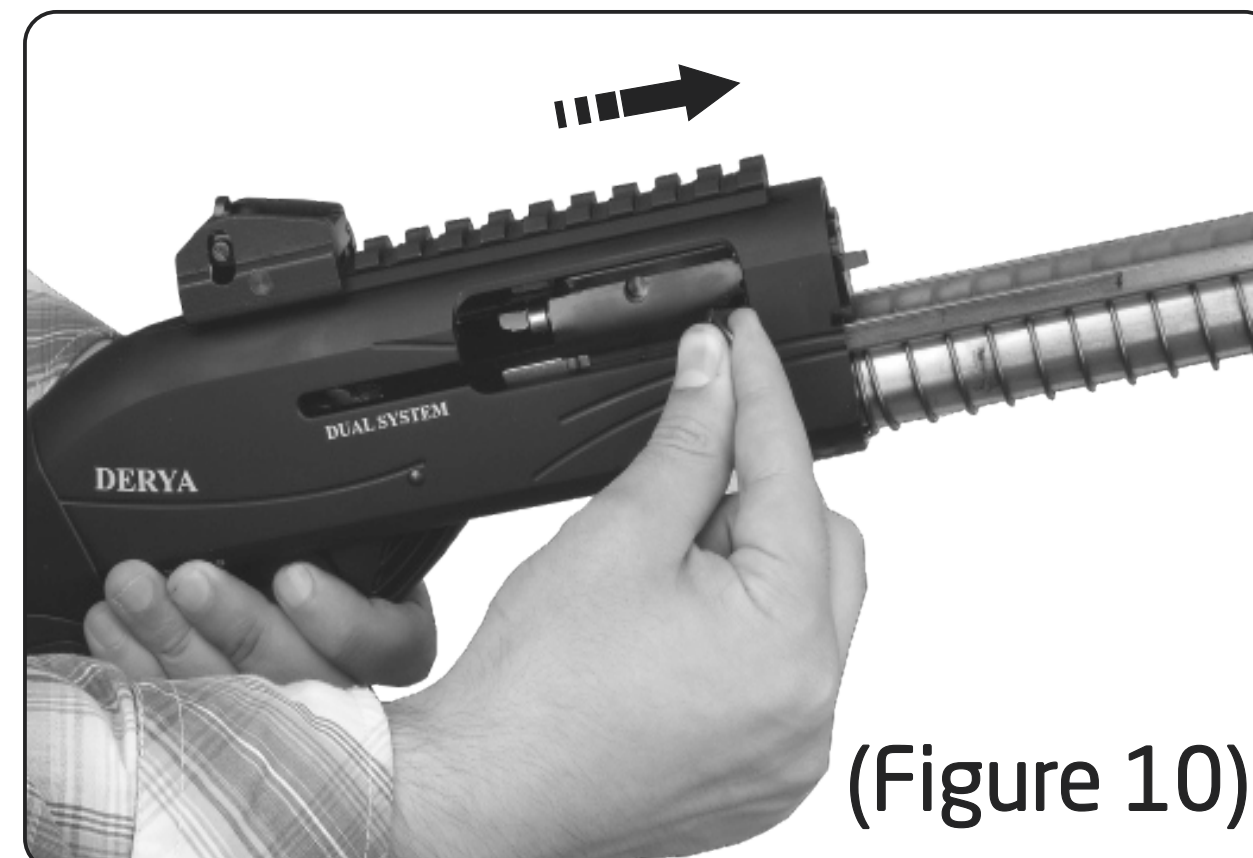

(Figure 8)

DISTMANTLING OF BARREL

Turn to The Bolt-Nut to anti-clockwise side which is on the Gas Chamber. (Figure 8)


(Figure 9)

Remove to Barrel up , while you are holding to Gas Chamber.
(Figure 9)



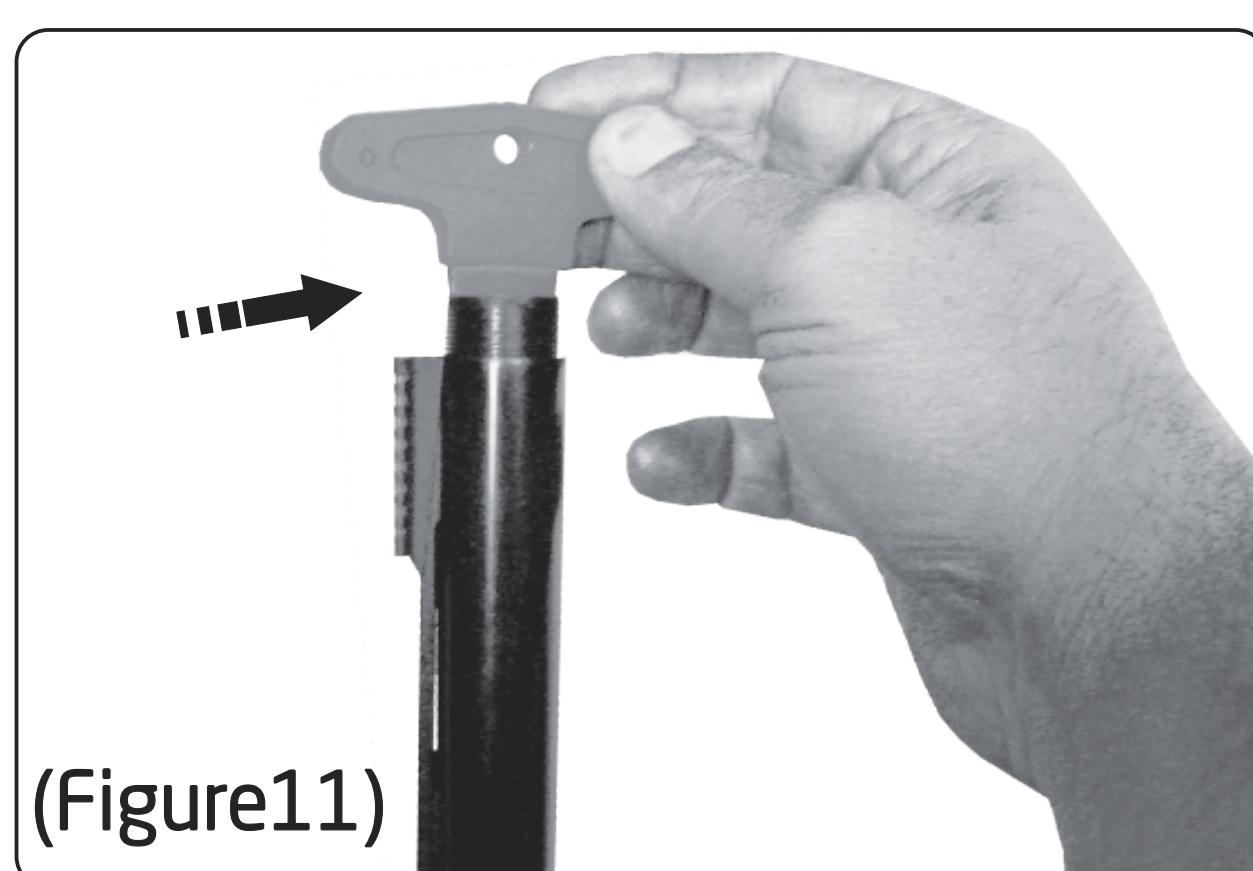
(Figure 10)

DISTMANTLING OF BOLT ACTION & TRIGGER GROUP

Remove to Bolt (Operation) Handle and remove to bolt action with pulling forward .
Remove to Reciever Pin and remove to Trigger Group and Carrier with pulling down .
(Figure 10)

REMOVING TO CHOKE

You can remove to Choke with Choke Key . You must place to Choke Key in to suitable niches on the Choke and Turn to anti-clockwise side. (Figure 11) You can remove to Extended Choke to turn anti-clockwise side with your hand easly. (Figure 12)


(Figure11)


(Figure 12)

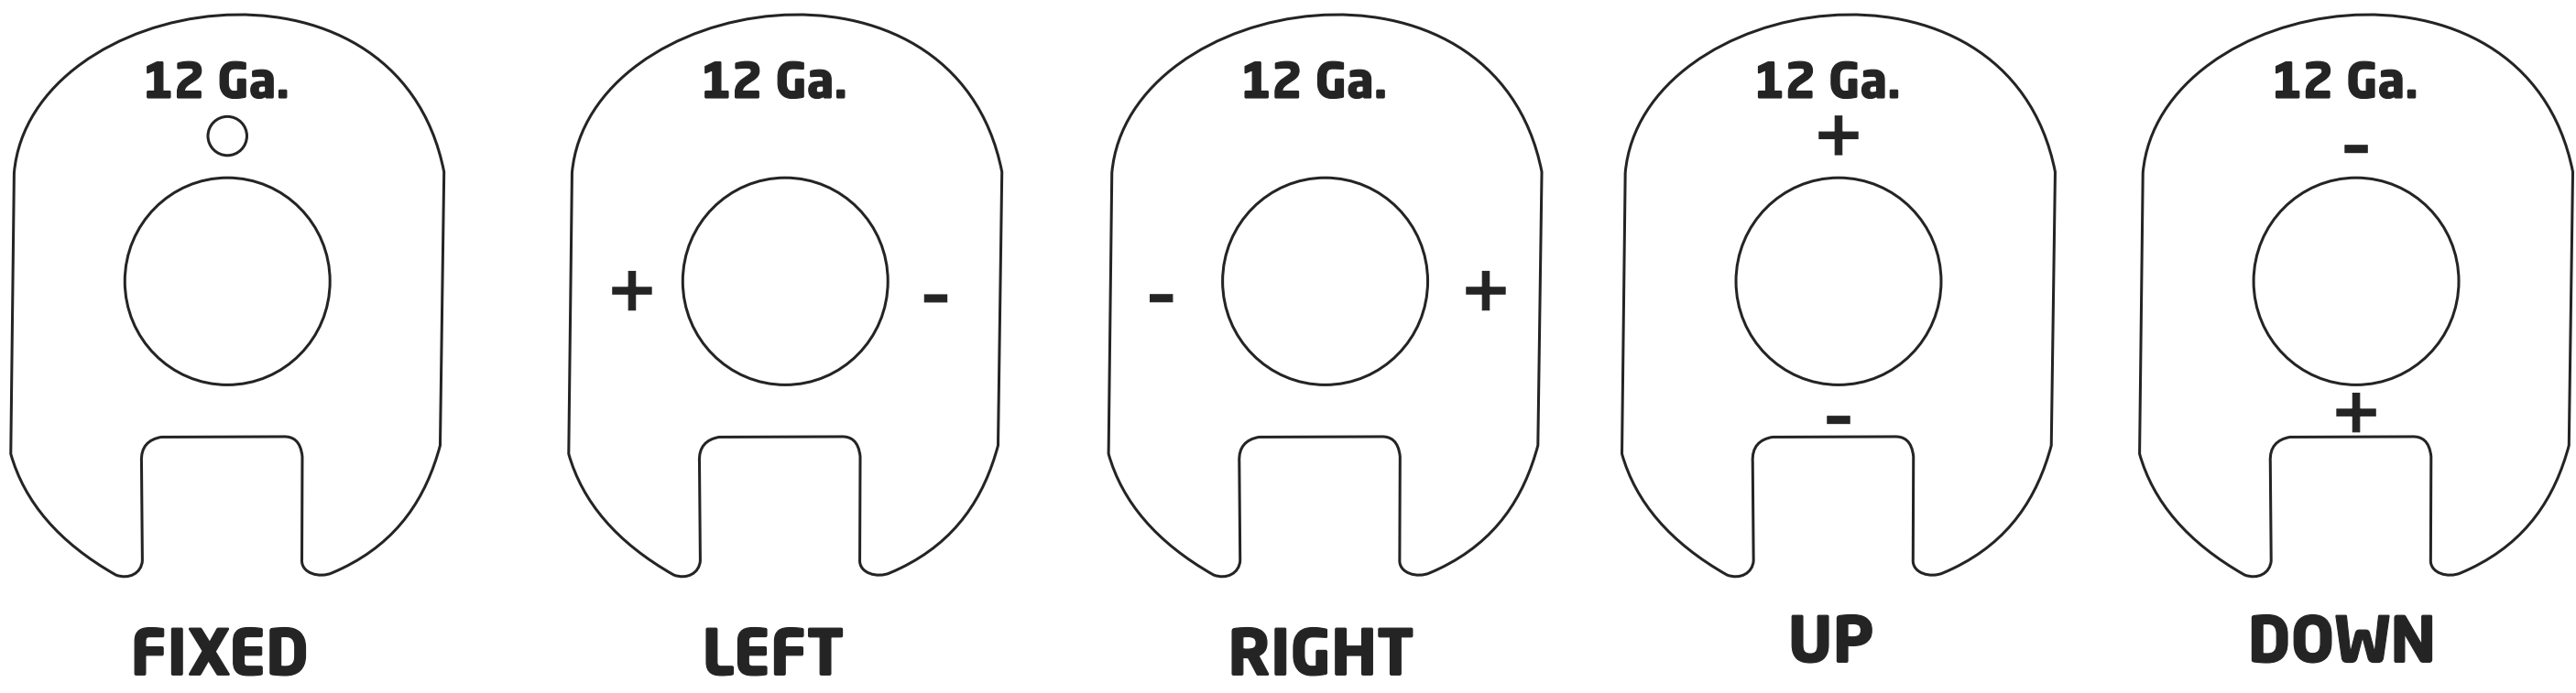
USAGE OF CHOKE TUBES

The choke is what controls the openness or tightness of the pattern of your shotgun. The chart below lists the choke available (from open to tight), and the corresponding marks that indicate the choke of your specific shotgun.

	SKEET	I C	M	I M	F
CHOKE TUBE					
BBLS	C L	****	***	**	*

Never fire or run gun cleaning tools through a barrel that uses choke tubes without having a choke tube installed. The threads of the choke tube and the internal threads of the barrel should be cleaned after each use and befofe installation of the tube.

To install a tube, insert the tube into the barrel and tighten with your fingers. Once the tube is finger tightened, tighten with the appropriate choke-tube wrench until the tube is snug. **DO NOT over tighten or forcefully tighten with wrench.**



There are five (5) Shim Sets as Up,Down,Right,Left and fixed kinds in Derya Arms' Productions , in order to accommudate all shooters' preferences .

WARNINGS AND MEASURES

*Be carefull that your shotgun should be clean inside before using .
*Check your choke or muzzle break that they are settled on muzzle firmly .
*Dont use to 1 NO choke set with Steel Shot , While you are shooting Steel Shot , Please use 5 No Choke .
*Rates on the Schedule may change in some times , please use the Most Suitable Cartridge and Choke for your hunting .
*After using Shotgun , Please clean Gas Chamber and System Changing Button&Latch of Dual Action everytime .
*Before firing Shotgun , Please check your Magazine Cap firmly or not , because of if it is loose , Shotgun will NOT work properly .
*Please prefer suitable Oil for Your Shotgun .
*Use Suitable Cartridges in your Shotguns , Otherwise , Derya Arms will be NOT responsible to any damage on your Shotgun .

DUAL SYSTEM SHOTGUN TECNİCAL USING INFORMATION

*Derya Dual System Shotgun is a Semi-Automatic shotgun which is operating with gas-system , producted by Derya . Derya Arms International has a Patent for this shotgun which is name of Useful Model No: TR2013/1169Y Derya Dual System Shotgun is working with ;
System Changing Button&Latch which is mounted on Gas Chamber . And This Shotgun can operate both pump-action and semi-auto in two (2) System operating. (it is not same time)

Operating is starting with a recoil , after firing gas pressure . Bolt Action and Action-Bar will come back to press Main Spring to complete system and throw empty shell outside . While Main Spring is going back to normal stuation , this action will put a new cartridge in to Chamber . For change to Pump-Action Mode , You must Turn to System Changing Button to Pump-Action Mode . This Action will close to gas Ports in The Gas Chamber , and let to act Fore-End free Position . You must act to Fore-End to load cartridge for each shot .

DERYA ARMS INDUSTRY’s productions have certifications of TSE (Turkish Standart Institue) Certifications as name of TS 870 4.2

WARRANTY TERMS

1)Warranty terms starts with End User Bought the Shotgun and this date is 2 year .

2)The Repair time will be add in to Warranty Time .

3)The Repair Time is maximum 40 Business Day and this time will start that end user bring the shotgun to Service Station or Dealer (Importer) .

4)Warranty Terms included , installation faults , workmanship faults , wrong parts mistakes .

And Derya Arms gives commitment to repair all above malfunctions under the this warranty terms with free .

5)Warranty Terms dont include to Shipping&Freight costs and walnut stocks mulfunctions.

6)Warranty Terms dont include malfunctions which in case of a using Shotgun violation of Terms of User Manual Rules .



Tel. : (+90.332) 524 60 32 - 524 60 34
Fax : (+90.332) 524 62 14

Tic. Sic. No : 1390
Oda Sicil No : 1226
Beyşehir V.D. : 217 583 357 56

MALIN / PRODUCTIS

Cinsi KIND	Yivsiz Av Tüfeği SHOTGUN
Markası KIND	
Modeli MODEL	
Bandrol ve Seri No BANDEROL&SERIAL NUMBER	
Teslim Tarihi ve Yeri DELIVERY DATE&PLACE	
Azami Tamir Süresi LATEST REPAIR DAY	40 İş günü 40 BUSINESS DAY
Garanti Süresi Warranty Date	2 yıl 2YEARS

SATICI FİRMANIN / MANUFACTURERIS

Ünvanı TITLE	
Adresi ADRESS	
Tel/Telefaks TEL&FAX NUMBER	
Fatura Tarih ve No. NO&DATE OF BILL	
Tarih - İmza - Kaşe DATE&SIGN&STAMP	



DERYA

INTERNATIONAL ARMS COMPANY

Tel. : +90 332 524 60 32 - 34 - Fax +90 332 524 62 14
www.deryaarms.com - info@deryaarms.com

 deryaarms  deryaArms 

Derya Silah  deryaarms



